

Care and Maintenance:

Note: Water will cause damage to your Finishing Touch™ Lumina. Do not use Finishing Touch™ Lumina in a damp room or near water. When not in use, be sure the unit is turned off.


1. Turn the unit off and remove the battery. (see step 1 of "Inserting/Replacing the Battery.")
2. Using the enclosed brush, gently wipe away any hair or dust. Do not remove foreign matter with a sharp object. The removable comb attachment may be washed. However, make sure it is thoroughly dry before reuse.
3. Replace the cap when storing the Finishing Touch™ Lumina.



PERSONAL HAIR REMOVER

INSTRUCTIONS

Finishing Touch™ Lumina Features:

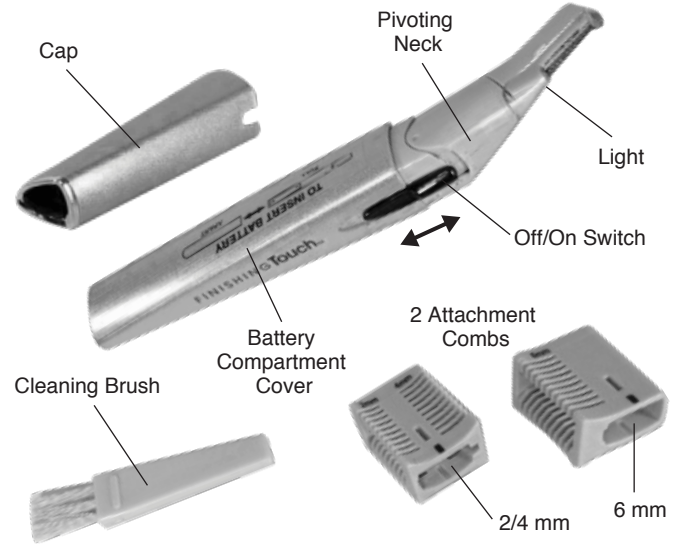

Thank you for the purchase of your new Finishing Touch™ Lumina hair remover featuring our pivot comfort head and built in light.

DIRECTIONS FOR USE:

Note: Prior to first use, test the unit on a small area of your arm or leg. If any sensitivity or allergic reactions occur, discontinue use immediately. Do not use your Finishing Touch Lumina™ on sensitive or irritated skin.

For full body hair removal try Finishing Touch Yes!



Distributed by:



Wayne, NJ 07470
Made in China. ©2014 Ideavillage
customerservice@ideavillage.com
FTL07312015AD

Inserting/Replacing The Battery:

1. Turn the power off and remove the cap. While firmly holding the upper part of the unit, slide off the bottom part to expose the battery compartment (Figure 1).
2. Remove old battery if necessary. Then insert a new AAA battery following the polarity indicators (Figure 2).
3. Replace the battery cover; be sure the cover is aligned with the on/off switch (Figure 3).

Attempting to force the cover on incorrectly may cause damage to the unit.

Important Note:

To avoid damage to your Finishing Touch™ Lumina, ensure that the battery is inserted in the proper direction indicated by the +/- signs. If your Finishing Touch Lumina™ will not be used for a long period of time, remove the battery from the unit.

How to use Finishing Touch™ Lumina:
DO NOT USE ON WET SKIN.

1. Remove the protective cap and slide the power switch up to the "ON" position (Figure 4).
2. Hold the unit at a 45 degree angle to your face and trim in the opposite direction of your hair growth (Figure 5).
3. Continue to trim in the opposite direction of the hair growth until the hair is removed.

Do not apply excess pressure. Doing so may result in injury to the skin and damage to the unit's head.

(continued on next page)

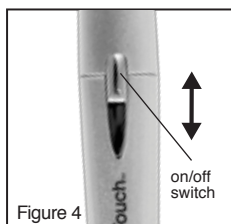 


Figure 4

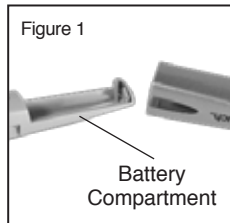 


Figure 1

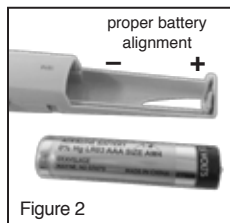 


Figure 2

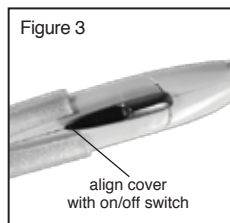 


Figure 3



Figure 5

How to use Finishing Touch™ Lumina: (continued)

4. For the cleanest hair removal, pull your skin taut with one hand while trimming.

Using The Comb Attachment:

Included with your Finishing Touch™ Lumina are two comb attachments for trimming eyebrows. The 2mm/4mm comb is for trimming shorter eyebrows. The 6mm comb is for trimming longer eyebrows.

1. Make sure the unit is turned off.
2. Slide the appropriate side of the comb attachment onto the unit's head (Figure 6). Be sure to align the grooves on the attachment with grooves on the unit's head.
3. Be sure the trimming size you prefer is facing the same direction as the trimmer. To remove the comb, turn the power off, hold the sides of the upper part of the battery cover between your fingers, and simply slide the comb off.

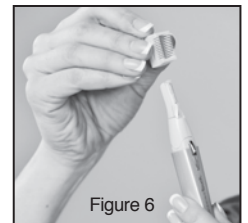


Figure 6

Using The Pivoting Neck:

1. Remove the cap & be sure the unit is turned off.
2. Gently move the unit's head to the right. Be sure the head is locked into position prior to use.

To put the head back to the original up-right position.

1. Turn the Finishing Touch™ Lumina off.
2. Gently move the unit's head to the left. Be sure the head is locked into position prior to use.
3. Replace the cap when finished.

Warning:

- Keep out of reach of children.
- Do not look directly into light during use.
- Avoid direct eye exposure.

(continued on back page)